



PUT11 / PUTAHR / PUTAHL / PUHPPE PUTFH / PUTE / PUTMH / PUTSP


PUT11

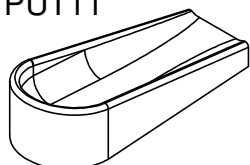


PUTAHL

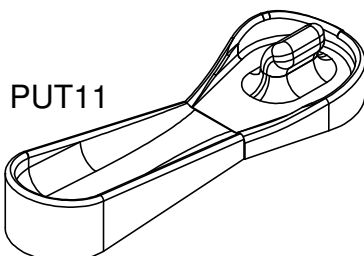


PUTAHR

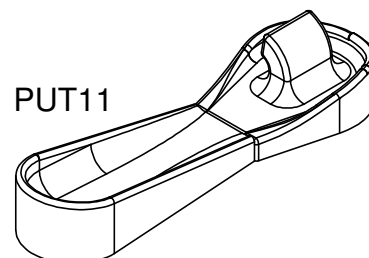


PUHPPE

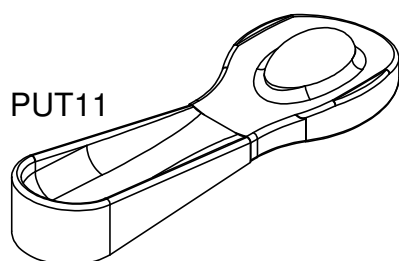

PUTFH

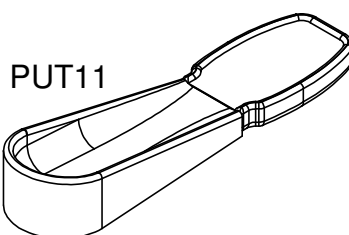


PUTAHL

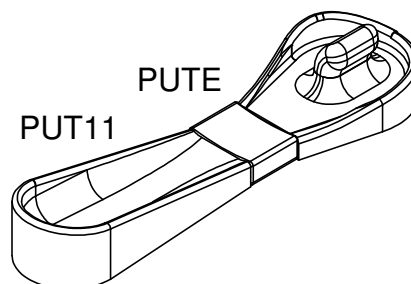


PUTE

PUT11


PUTAHR

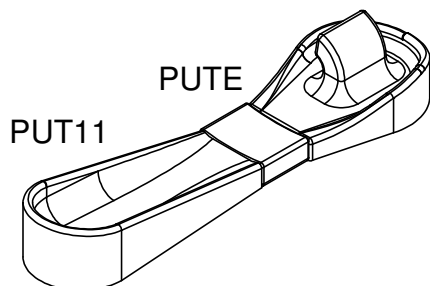

PUHPPE

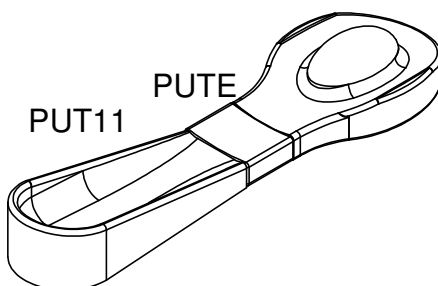


PUTFH

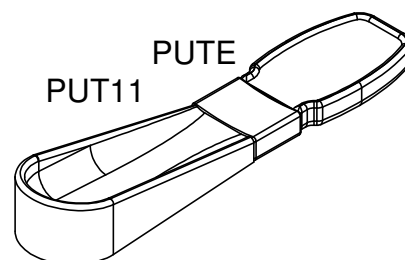


PUTE

PUT11

PUTMH

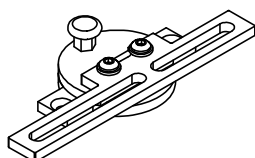


PUTSP

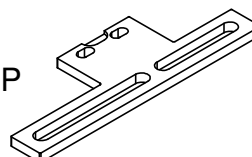


PUT11

1. INSERT T-NUTS INTO
SLOT, 2X.

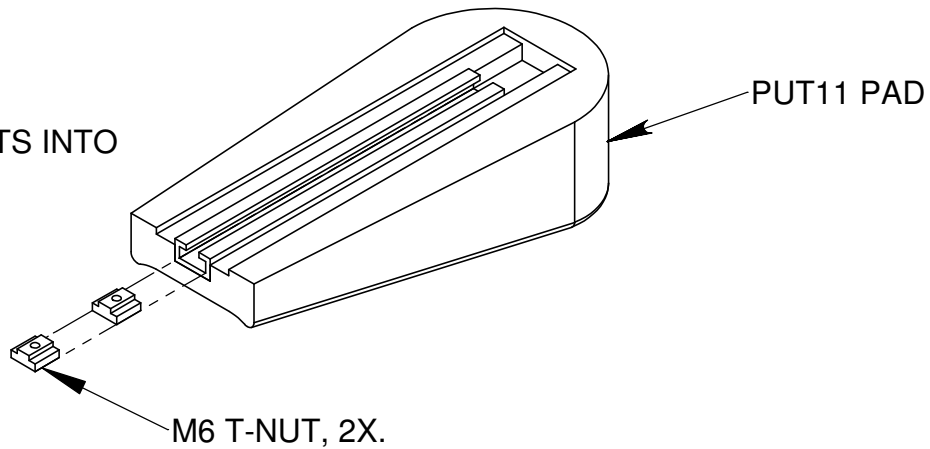


2. ATTACH PAD TO CHAIR
ARM AS SHOWN.


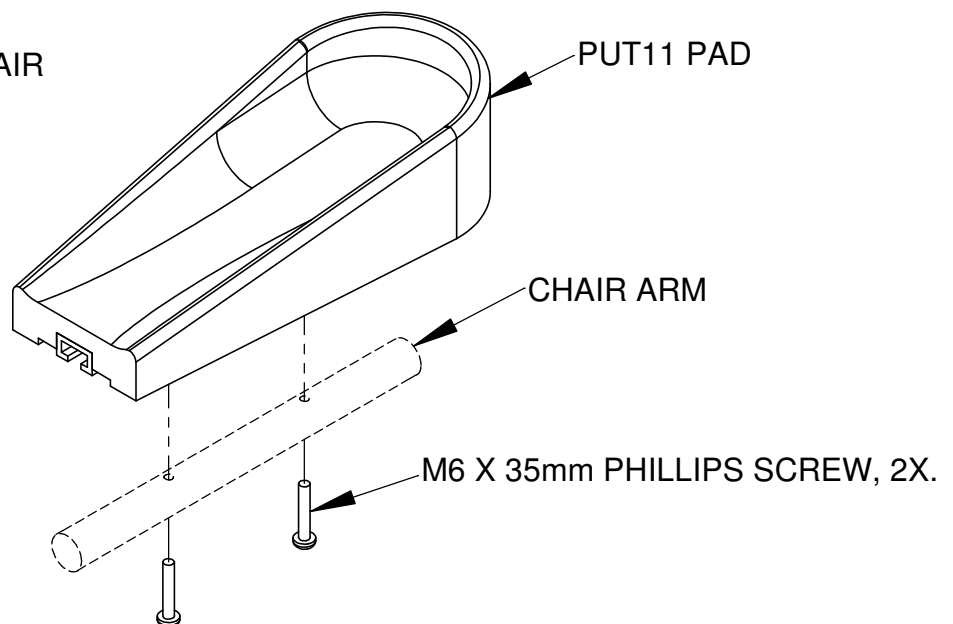


PUT11 + PUHPPE, PUTFH, PUTAHR, OR PUTAHL

M6 X 8mm
SET SCREW, 4X.

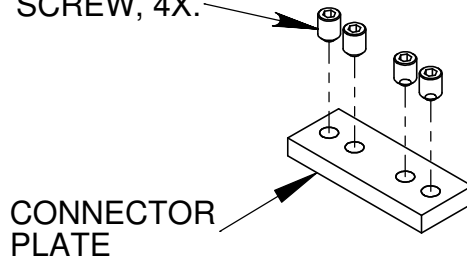

1. THREAD M6 SET SCREWS
PARTIALLY INTO CONNECTOR PLATE, 4X.

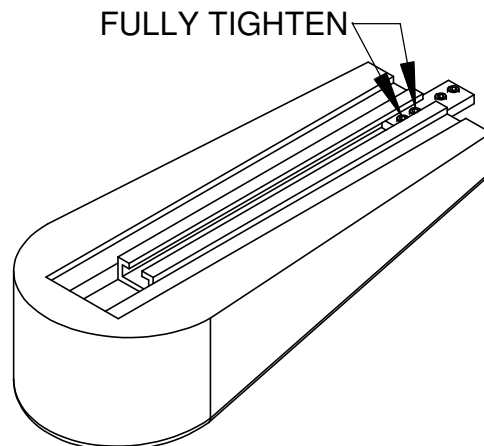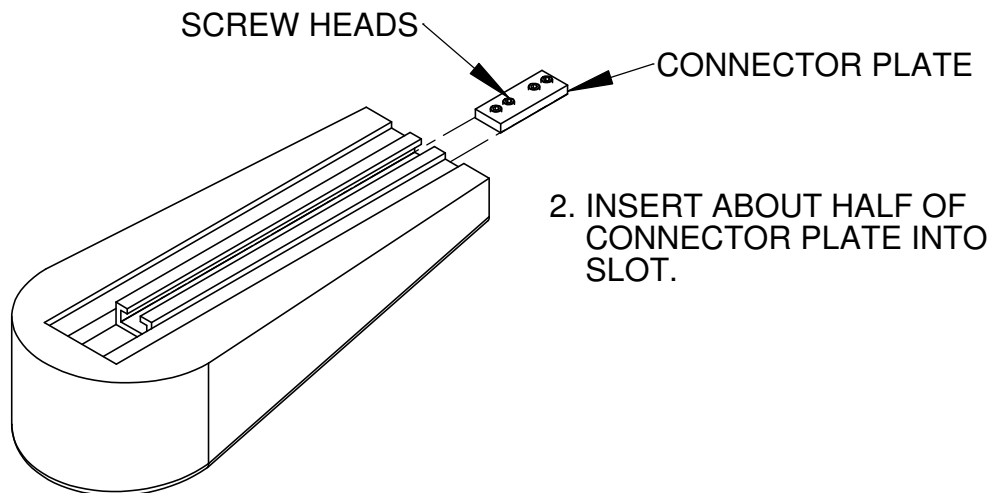


3. FULLY TIGHTEN
2 SET SCREWS
AS SHOWN.


CONTINUED ON NEXT PAGE

PUT11 + PUHPPE, PUTFH, PUTAHR, OR PUTAHL

4. INSERT CONNECTOR
PLATE INTO SLOT IN
FRONT PAD

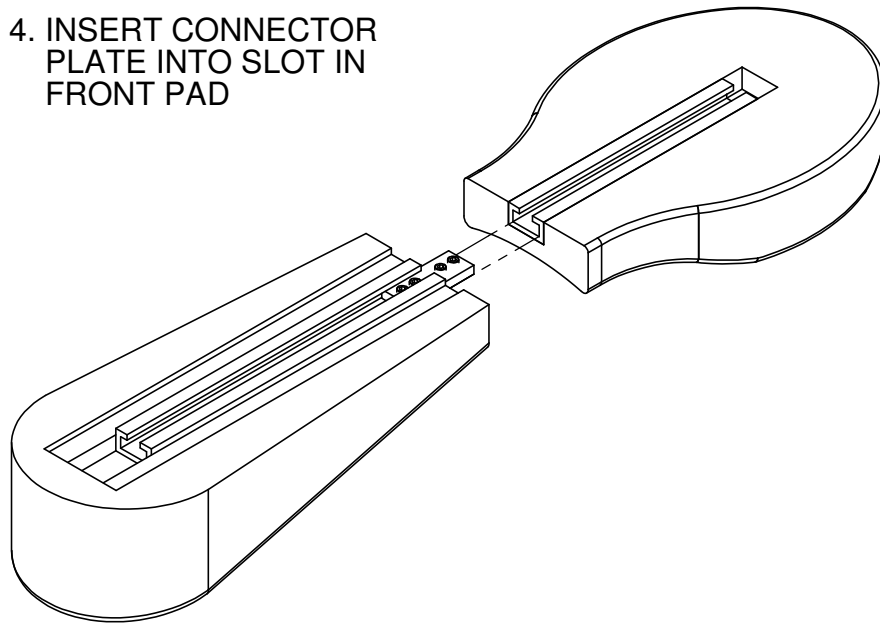


5. PLACE PADS TOGETHER
AND FULLY TIGHTEN SET SCREWS
AS SHOWN, 2X.

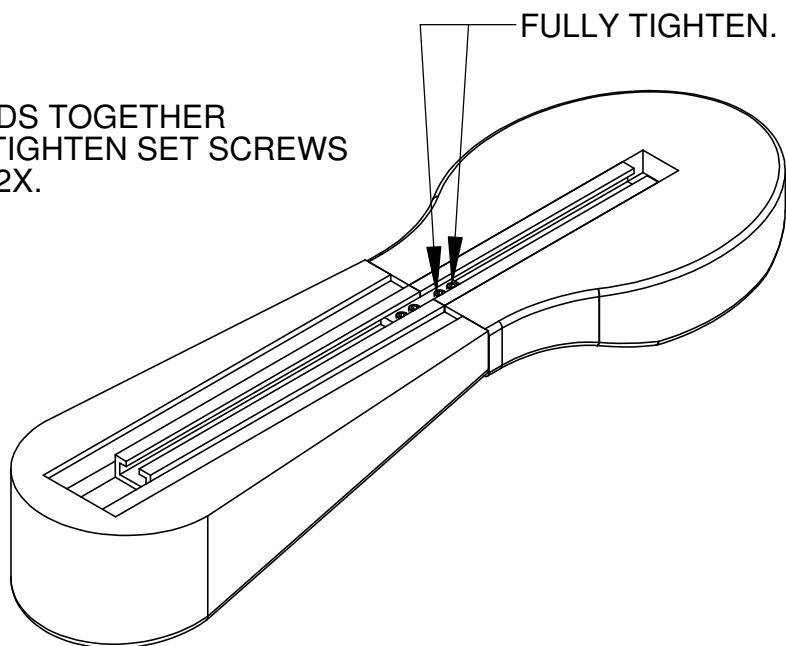


PUTE EXTENSION

1. PLACE CONNECTOR PLATES INTO SLOTS . (SEE PAGE 3 & 4.)

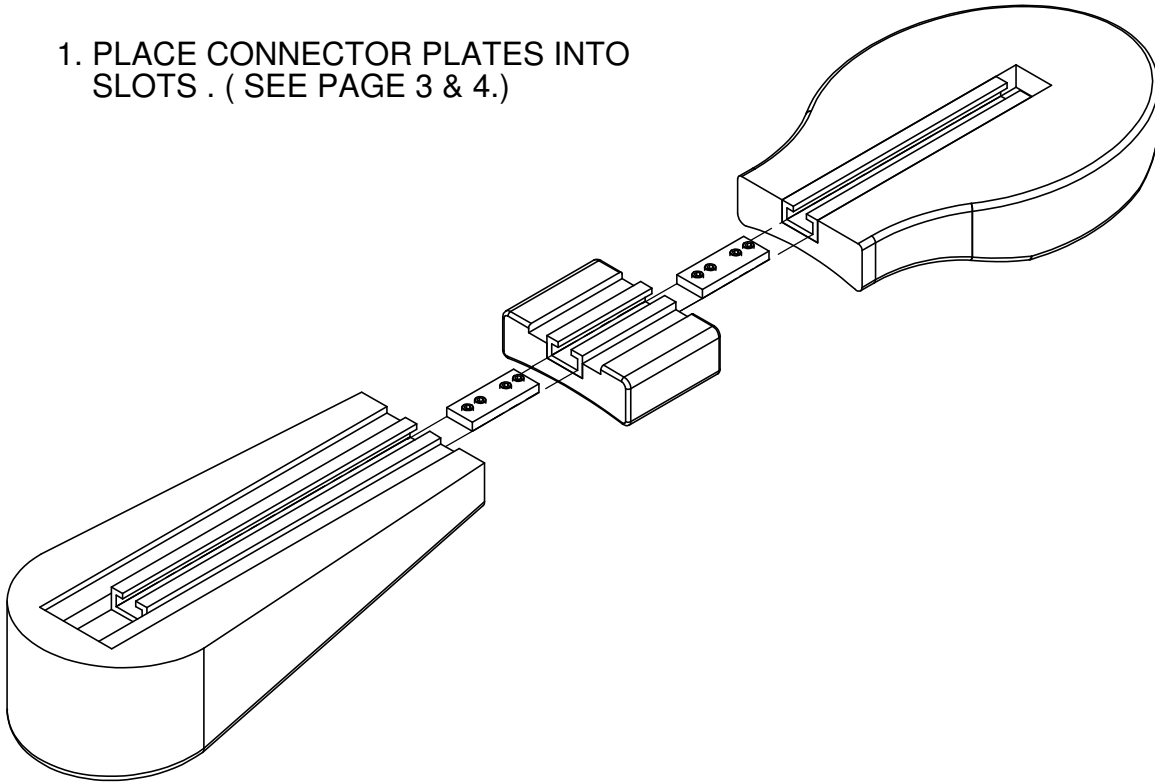


2. FULLY TIGHTEN SET SCREWS
8X.

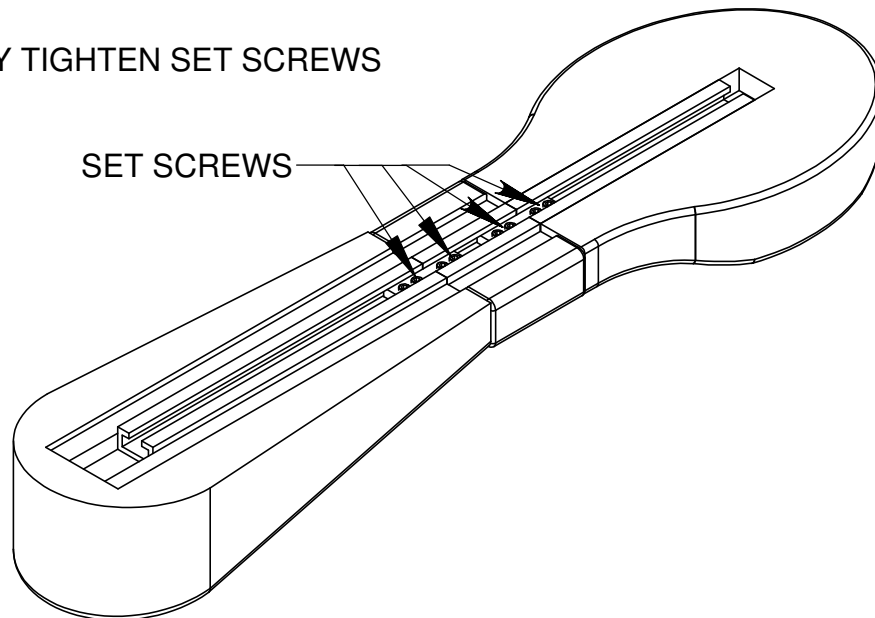


PUTMH & PUTSP

1. PLACE T-NUTS INTO
SLOT AS SHOWN, 2X.

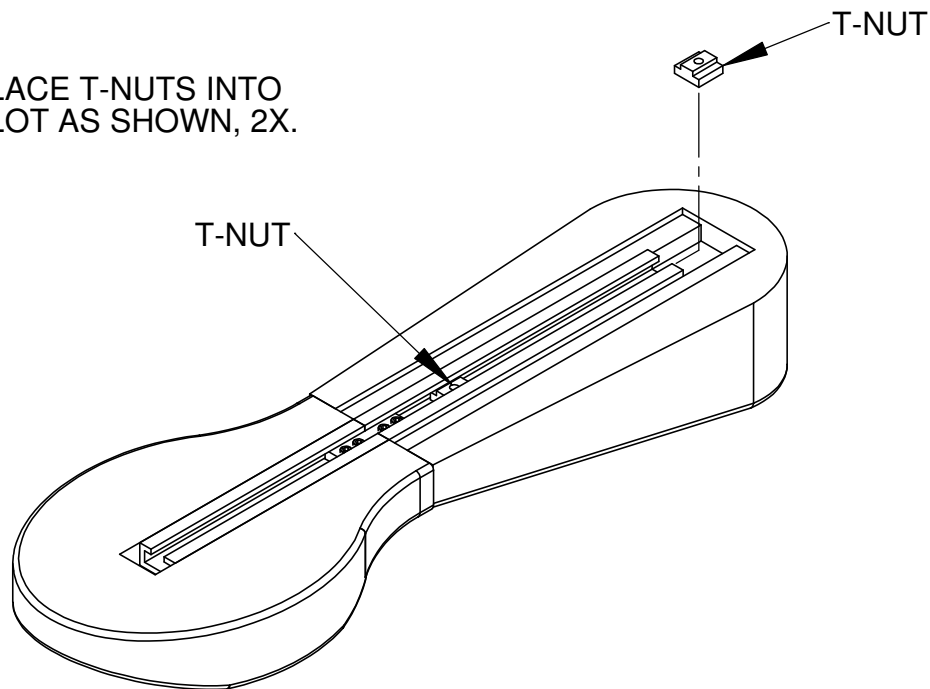


2. ATTACH SWIVEL BRACKET
TO T-NUTS USING
M6 FLAT HEAD SCREWS, 2X.

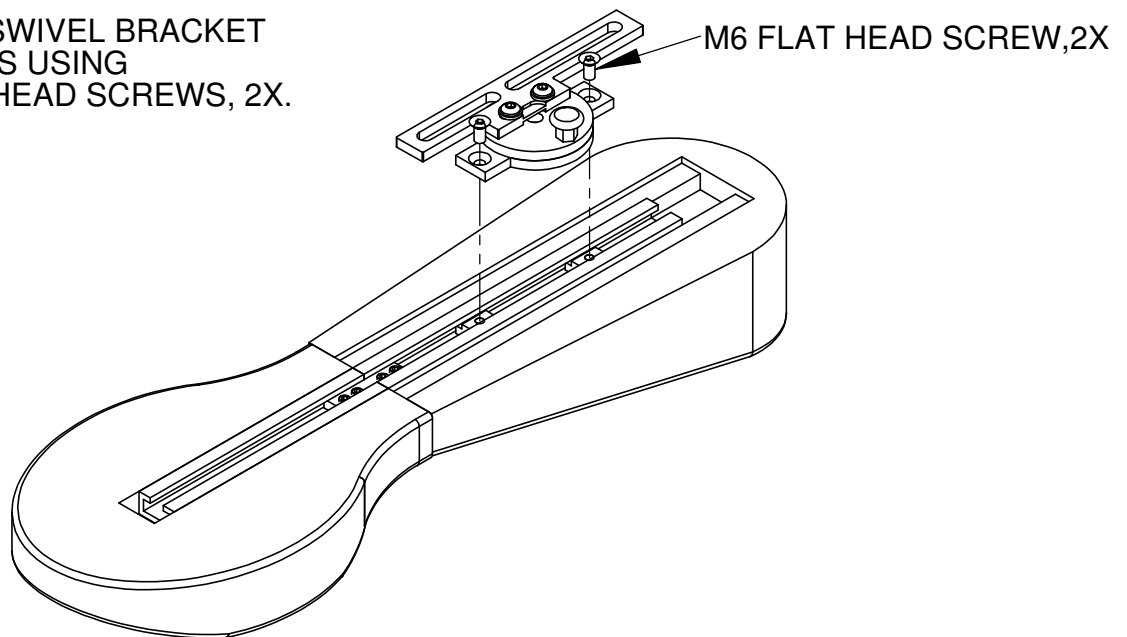


CONTINUED ON NEXT PAGE

PUTMH & PUTSP


3. ATTACH ARM & SWIVEL BRACKET
TO CHAIR ARM AS SHOWN.

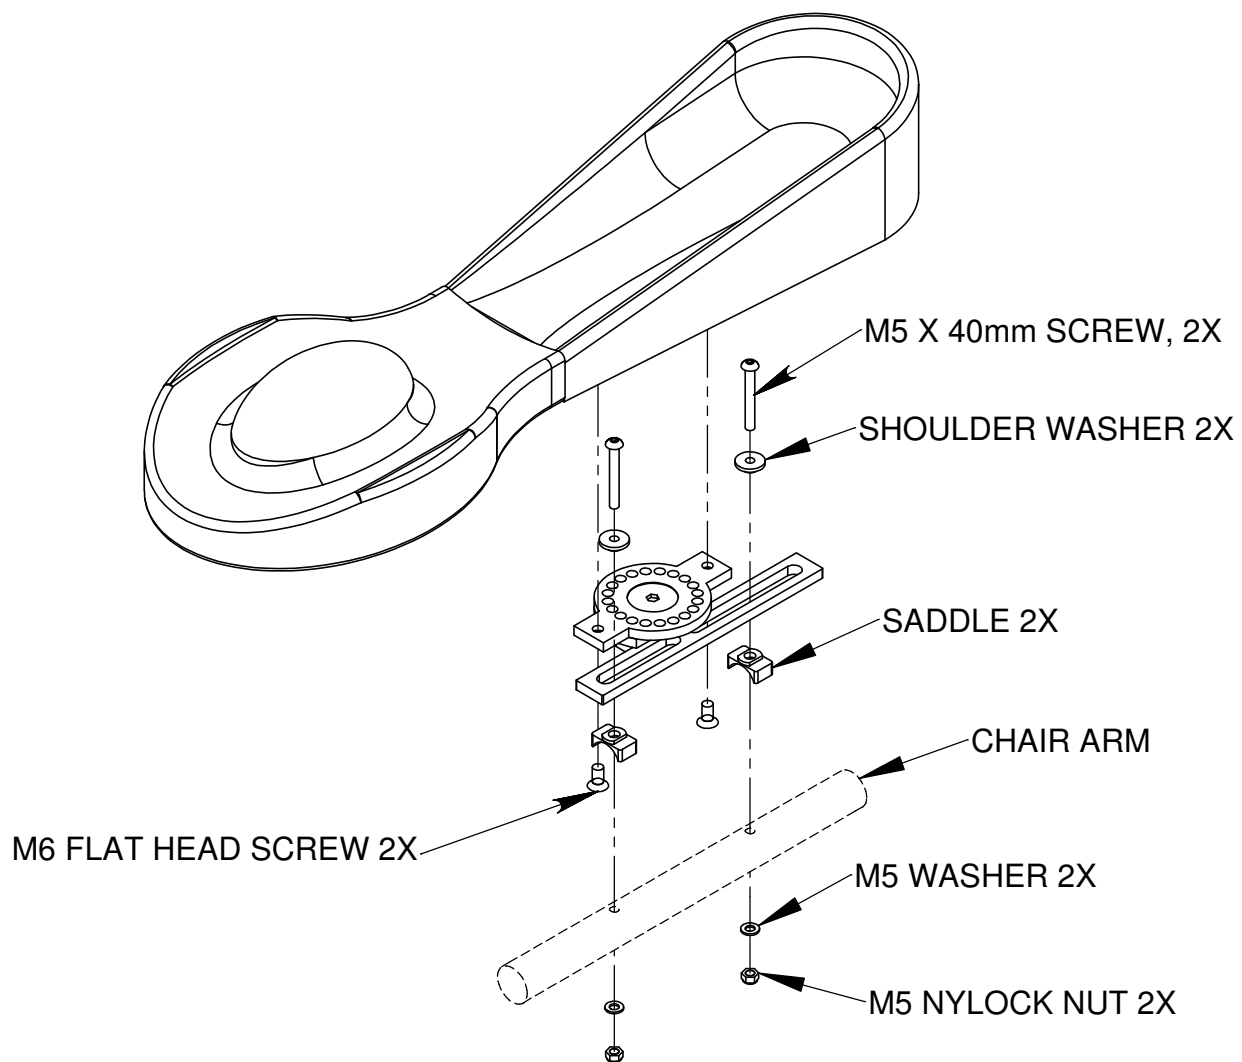


PUTSP

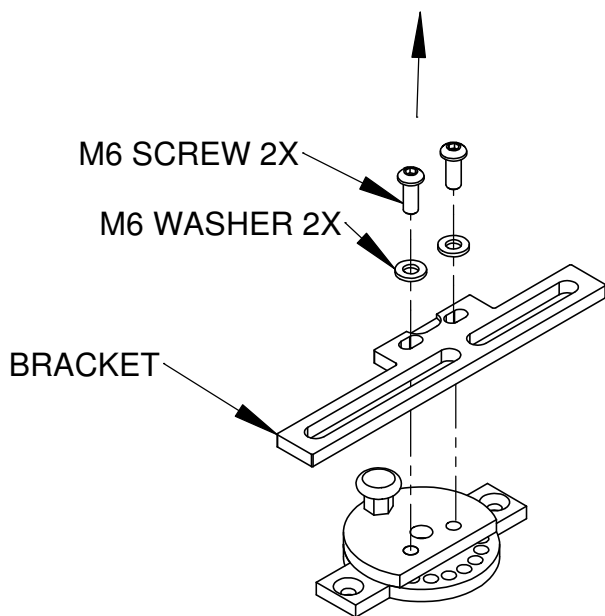

1. REMOVE BRACKET FROM
PUTMH SWIVEL ASSEMBLY.

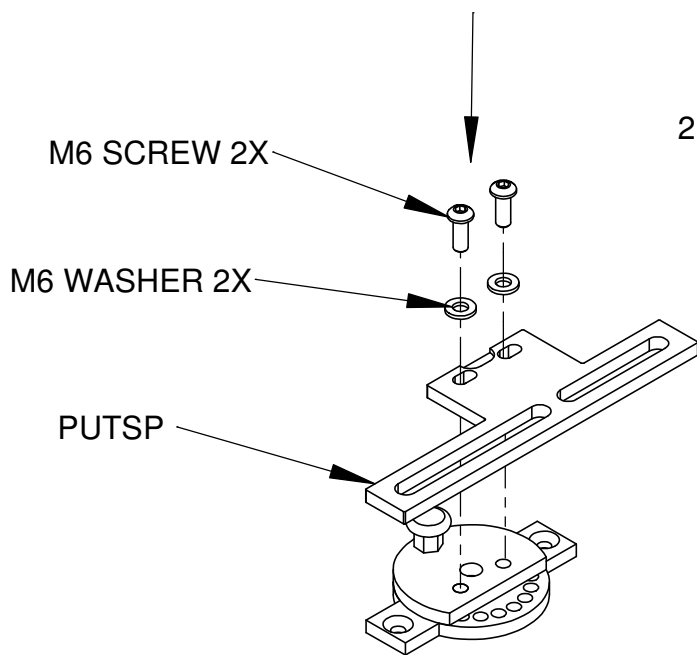

2. INSTALL PUTSP ONTO
SWIVEL BRACKET.

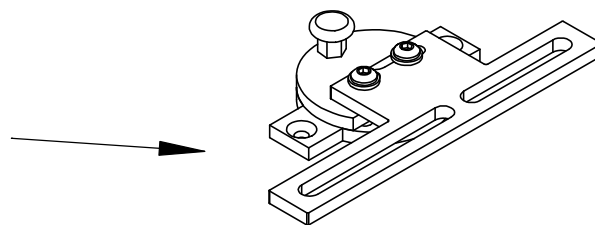

3. INSTALL ON PAD AND CHAIR AS SHOWN
ON PAGES 6 & 7.